
Product Overview

Product Layout

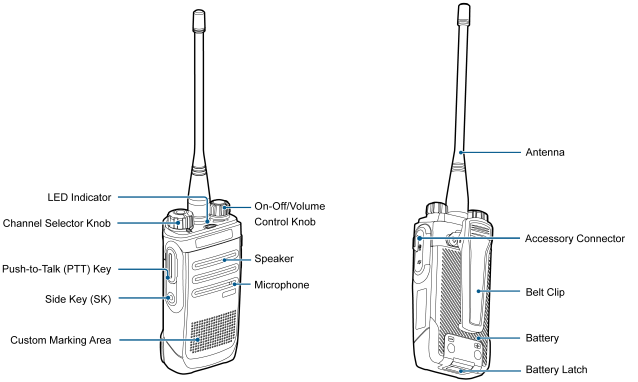

Programmable Key

For enhanced convenience, you can request your dealer to program **SK** as a shortcut to a radio feature. Consult your dealer for assignable radio features.

LED Indications

LED Indicator	Radio Status
Flashes green	The radio is being turned on.
Glows green	The radio is receiving.
Glows red	The radio is transmitting.
Flashes orange slowly	The radio is scanning.
Glows orange	Call hang time: No voice is being transmitted or received on the channel during a call. Within such a period, you can press and hold the **PTT** key and speak.

Basic Operations

Charging the Battery

CAUTION

- Read the *Safety Information Booklet* before charging.
- Use the approved charger to charge the battery.
- The remaining lithium-ion battery power is limited to 30% pursuant to the new lithium battery shipment regulation approved by International Air Transport Association (IATA).

Before initial use, make sure to charge the battery. You can charge either the standalone battery or the radio with battery attached. It is recommended that the radio remain powered off during charging.

The LED indicator on the charger shows the charging status. For details, see the following table.

LED Indicator	Charging Status
Glows red	The battery is being charged.
Glows orange	The battery is charged to 85% or more.
Glows green	No battery is placed on the charger, or the battery is fully charged.

Turning the Radio On or Off

To turn the radio on or off, rotate the **On-Off/Volume Control** knob clockwise or counter-clockwise until you hear a click.

Adjusting the Volume

To increase or decrease the volume, rotate the **On-Off/Volume Control** knob clockwise or counter-clockwise.

Selecting a Zone

A zone is a group of channels within the same operational area. The radio

SyncComms

supports up to 3 zones, each of which contains up to 16 channels.

To select a zone, press the preprogrammed **Zone Up** or **Zone Down** key.

Selecting a Channel

To select a channel, rotate the **Channel Selector** knob.

If the Channel Notify feature is enabled, the radio automatically announces the current channel upon power-on and channel change.

Call Services

When you are speaking during a call, keep the microphone about 2.5 to 5 cm away from your mouth. This ensures optimal voice quality on the receiving radio.

Call on Digital Channel

You can initiate or receive the following types of calls on a digital channel:

- Private call: a call from an individual user to another individual user.
- Group call: a call from an individual user in a group to all the other members in the group.
- All call (enabled by your dealer): a call from an individual user to all other users on the current channel.

Initiating a Call

- On the home screen, rotate the **Channel Selector** knob to select the required channel, and then press and hold the **PTT** key to initiate a call to the private/group/all call contact preset on the channel.
- If the One Touch Call feature is configured by your dealer, press the preprogrammed **One Touch Call** key, and then press the **PTT** key to initiate a call to a private or group contact.

Receiving and Responding to a Call

You can listen to an incoming call without any operation.

To respond to a private or group call, press and hold the **PTT** key within the preset time.

Ending a Call

- A private/group call ends when the call hang time expires.
- An all call ends when the calling party releases the **PTT** key.

Call on Analog Channel (Without Signaling)

You can initiate a call to all other users on the current analog channel. The operations are the same as those on digital channel.

For details on more features and operations, please visit our website at: http://www.hytera.com, or scan the QR code to download the *User Manual*.

SyncComms